



REFERENCE GUIDE

CTS-HW-450



WHAT IS INCLUDED

1. CTSTURBO INLET



NOTES

THIS IS A REFERENCE GUIDE ONLY. Refer to factory procedure for removal of original turbocharger. Always make sure the car is safe to work on. Do not work on a hot motor.

STEP 1

Remove intake system.



**STEP 2**

Disconnect the PCV from the OEM turbo inlet.

NOTE: The PCV connection may look different on G20 B58 BMW's. Installation will still be the same.

STEP 3

Disconnect the C-clip and remove the OEM turbo inlet.




STEP 4

Transfer the oring to the CTS
turbo inlet pipe



STEP 5

Install the turbo inlet and insert the C-clip as shown.

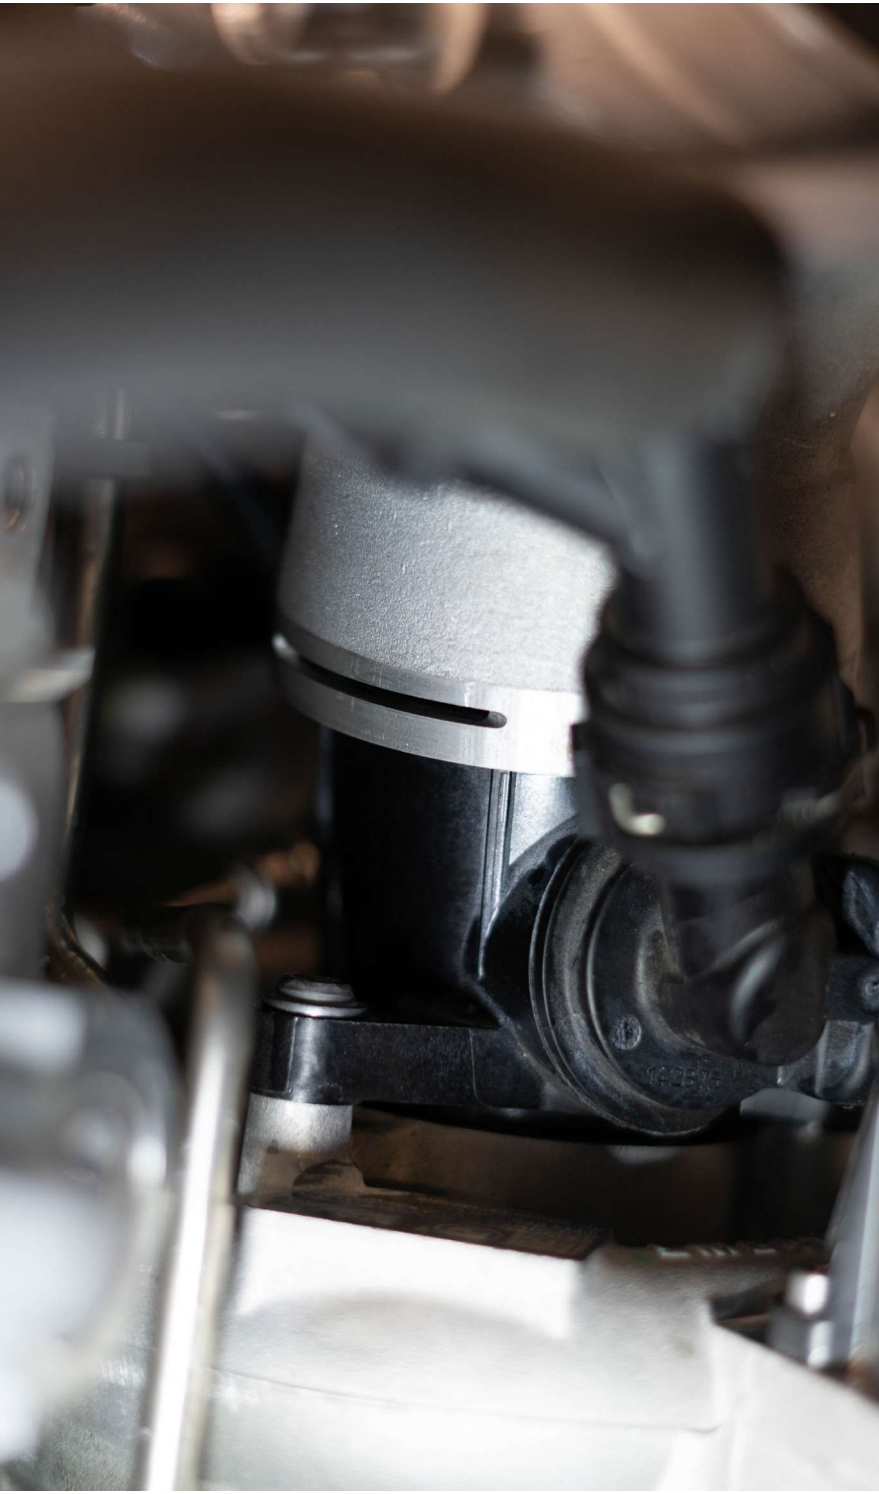

STEP 6

Reinstall the PCV line.

Install your intake system and you are done.

